PCM DELASCO



The simple solution for transferring and dosing in Industry





improving your process

PMA Series from PCM Pompes :

The peristaltic pumping principle is based on the capacity of a soft elastomer hose accepting a deformation and subsequently recovery its initial shape.

🜔 Advantages

Of the peristaltic principle:

- Dry Running
- Self-priming
- Seal-less Design
- Reversibility


Of the PMA Series:

- Simple and quick maintenance
- Excellent quality/price ratio
- Compact Pump
- Pump body in plastic so resistant to corrosion
- Available in stock

Characteristics

- Minimum flow-rate: 14 l/h
- Maximum flow-rate: 200 l/h
- Maximum pressure: 1.5 bars
- Maximum temperature in continuous operation: 100°C
- Maximum density: 2
- Maximum solid particle size: 3 mm
- Maximum viscosity: 1800 cP
- Cylinder Capacity: 0.009 I
- Self-priming: 5 m W.C. maximum
- Speed: 0 to 195 rpm
- Reversible Pump

Operation

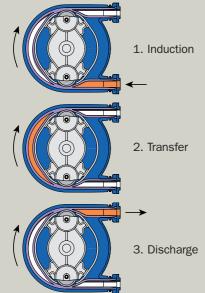


Performances

The PMA 10 can be equipped with a gear box or a 90 w, IP55, 220/400 tri-phase variable speed drive.

The pump may also use a mono-phase or a tri-phase frequency drive inverter (contact us).


Speed (rpm)	Flow rate (l/h)	Pressure (bar)
14	14	1.5
70	70	1.5
195	200	1
16 to 160	16 to 160	1

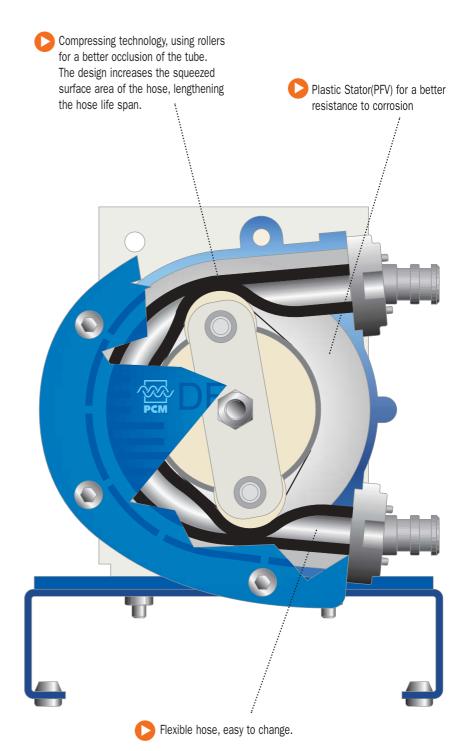




Flow curves on water basis at 20 °C. Viscosity 1 cP Specific gravity 1.0 Neoprene Hose Suction: negligible Delivery: 1 bar

Example: for a required flow of 105 l/hr one must select a PMA 10 pump running at 105 rpm. At this speed for an optimal hose life the pump should be used on an intermitent basis.

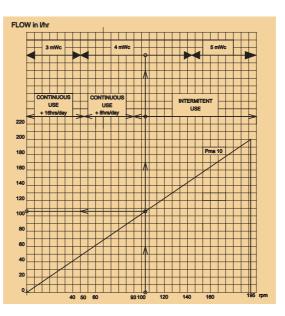


Dimensions



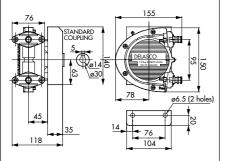

FIXED SPEED PUMPSETS

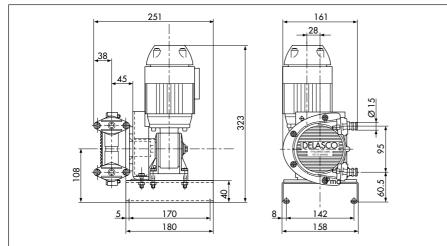

CONNECTIONS

Glass-filled PP connecting sleeve

and counter flange


1

PP Counterflange and 316L

Stainless steel connecting sleeve

13.5

VARIABLE SPEED PUMPSETS

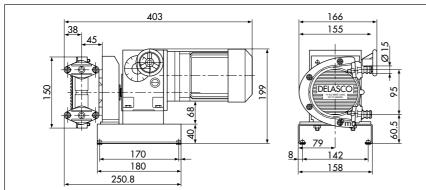

Applicable directives and standards

The pumps of the PMA Series are manufactured as part of an ISO 9001 certified organisation and comply with the directive requirements and harmonised CE and NF standards.



Characteristics of available hoses:

NEOPRENE

Standard grade for acids and bases. Caustic soda, detergents, surface treatment baths. Temperature : 5 to 95° C.

FOOD GRADE THERMOPLASTIC

Oxidising acids (sulphuric), bleach solutions. Chemical compatibility similar to EPDM. Its white-cream colour enables it to be used for food, cosmetic and pharmaceutical products. Temperature : 5 to 95° C.



Applications



PMA Series used for sampling in the control process at a waste water treatment plant

PMA Series for egg white transfer in the food industry



Activity Sector	Applications the PMA Series from the PCM Delasco Range
Water Treatment	Dosing of ferric chloride, lime milk, acids Recovering samples
Surface Treatment	Dosing of chemical products for the re-generation baths or the treatment of wastes Dosing and transferring of glues, inks, and additives
Paper & Board	Test units, laboratory pump, sampling
Chemicals	Dosing of products for CIP (Cleaning in Place)
Food	Dosing of flavorings, colorants, ferments Dosing of resins or catalysis in foundries
Materials	Dosing and transferring enamel or additives in tile making
Other	Dosing of products to mixers Recovering of water samples for analysis



HEAD OFFICE

FRANCE PCM POMPES, S.A. 17 rue Ernest Laval - BP 35 92173 VANVES Cedex FRANCE

Tél : +33 (0)1 41 08 15 15 Fax : +33 (0)1 41 08 15 00 pcm@pcmpompes.com

www.pcmpompes.com

CHINA Tel: +86 (0)21 62362521

Fax: +86 (0)21 62362428 pcmchina@pcmpompes.com www.pcmpompes.com

UNITED KINGDOM

Tel: +44 (0)1536 740200 Fax: +44 (0)1536 740201 sales@pcmpumps.co.uk www.pcmpumps.co.uk

GERMANY

UNITED STATES

Tel: +1 713 468 1777

Fax: +1 713 463 9992

pcmdelasco@pcmdelasco.com

www.pcmdelasco.com

Tel: +49 (0)611 60977-0 Fax: +49 (0)611 60977-20 info@delasco.de www.delasco.de

TUNISIA

Tel: +216 71 238 138 Fax: +216 71 231 713 pcmtunisie@pcmpompes.com www.pcmpompes.com

THAILAND

Tel : +66 2 811 8050 Fax : +66 2 811 9847 mwitayat@pcmpompes.com www.pcmpompes.com